

Installation of EPDM Moulded Corners

Specifications

Internal Corner – approx 102gms, size 100mm x 100mm x 100mm



External Corner – approx 112gms, size 100mm x 100mm x 100mm

Material – 1.5mm black neoprene rubber

Preparation of Area

Install the EPDM membrane (either the Self Adhesive or the One Piece Sheet) in the normal manner, as the EPDM moulded corners will be adhered **ON TOP** of the membrane and **NOT UNDERNEATH**.

Installing the moulded corners

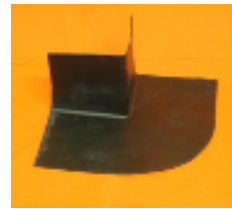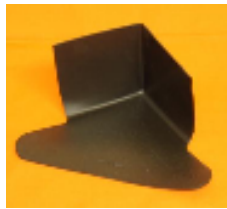

- Position the corner in place and mark a border using chalk around the corner piece 20mm wider than the corner piece
- Apply G2000 contact adhesive to the substrate area inside and up to the marked lines
- Apply G2000 contact adhesive to the whole of the corner piece
- Once dry, join the corner piece to the substrate, and press into position using a hard head roller to ensure a good adhesion
- Seal around the edge of the corner piece with EPDM Lap Sealant to ensure an effective watertight seal